
Instructions for BMW E70:

Warning: Do not install interface while ignition is turned on.


1. Carefully remove center ventilation unit using appropriate tools.



2. Remove both screws located at the top part of the A/C control unit and pull it out.
Once the control unit is removed from the duct, disconnect the attached plugs to allow for easier accessibility.



3. Remove the 4 TORX-screws marked in the picture on the right and carefully pull out the entire navigation unit.

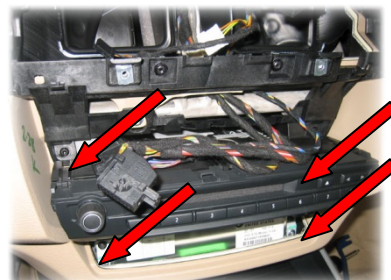

4. Disconnect the Quadlock-connector from the navigation unit and connect it to cable kit TF104.



5. Both 12-pin inserts located in the original Quadlock-connector and the optical cables need to be re-plugged to cable kit TF104. Then the latter has to be connected to the navigation unit.



Activation :


In order to activate or deactivate the function, push and hold the "MENU" or "i-Drive"- button for 3 seconds. When ignition is turned off, function is deactivated automatically.



(PUSH an hold for 3 seconds)

Setup:


- “ “DIP-switch position for Mercedes COMAND NTG2,
COMAND NTG4 (after SW update) and Porsche PCM 3.0 :

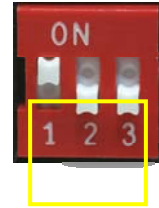

1 ON / 2 OFF / 3 OFF

(Navigation operable while TV-Free function is active)

- “ “DIP-switch position for Mercedes *COMAND NTG2.5,
BMW Navigation Professional :

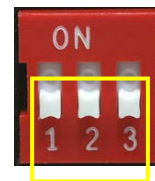

1 OFF / 2 OFF / 3 OFF

(*Navigation inoperable while TV-Free function is active)