

## Instructions for BMW E90/91/92:

**Warning: Do not install interface while ignition is turned on.**

1. Remove the loosely attached a/c unit using appropriate tools.



2. Also remove the cover of the navigation unit



3. Loosen the 6 screws holding the navigation unit and pull it out carefully.



4. Disconnect the Quadlock-connector from the navigation unit and connect it to cable kit TF104.



5. Both 12-pin inserts located in the original Quadlock-connector and the optical cables need to be re-plugged to cable kit TF104. Then the latter has to be connected to the navigation unit.



6. Re-attach system to center console.

**Activation :**

In order to activate or deactivate the function, push and hold the “MENU“ or “i-Drive”- button for 3 seconds. When ignition is turned off, function is deactivated automatically.




(PUSH an hold for 3 seconds)

## F001 Setup:

---


- “TF001“ DIP-switch position for Mercedes COMAND NTG2,  
COMAND NTG4 (after SW update) and Porsche PCM 3.0 :

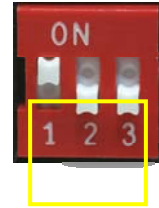

1 ON / 2 OFF / 3 OFF

(Navigation operable while TV-Free function is active)

- “TF001“ DIP-switch position for Mercedes \*COMAND NTG2.5,  
BMW Navigation Professional :

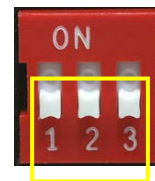

1 OFF / 2 OFF / 3 OFF

(\*Navigation inoperable while TV-Free function is active)